



MIRAGEDRIVE GT / V2

HOBIE MIRAGEDRIVE "GLIDE TECHNOLOGY"

- 80010501 MIRAGE DRIVE GT - ST FINS
- 80013501 MIRAGE DRIVE GTi - ST FINS iSERIES
- 80012501 MIRAGE DRIVE GTT - ST TURBO FINS
- 80012101 MIRAGE DRIVE GTT PA17 - ST TURBO FINS

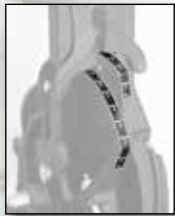

81172001 PEDAL ADJUSTMENT DECAL

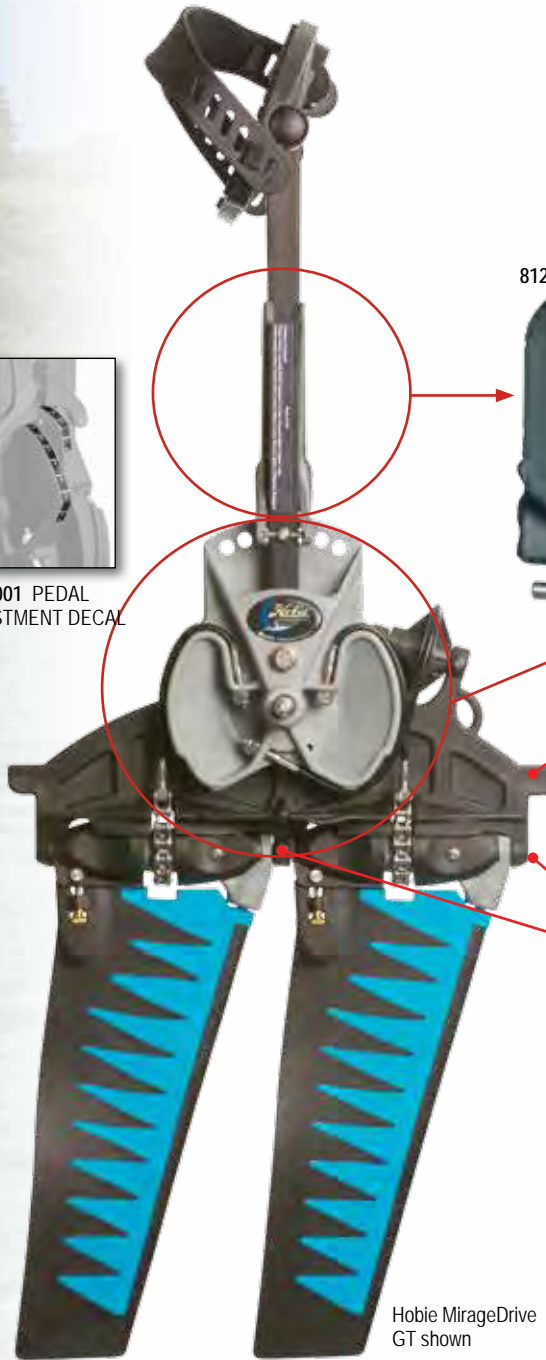

Hobie MirageDrive GT shown

81236001 PEDAL ADJ ASSY INCLUDES:

- 81240001 PLASTIC HANDLE
- 81230001 PIN
- 8031201 SCREW
- 81242001 SPRING
- 8034071 ALLEN WRENCH



81181001 SPINE NEW 2013

81080001 SPROCKET SHAFT
53170020 SET SCREW

COMFORT FIN

ST FIN

ST TURBO FIN



81190001

81193001 (GRY/BLK)

81193021 (RED/BLK)

81193031 (BLU/BLK)

81192001 (GRY/BLK)

81192021 (RED/BLK)

81192031 (BLU/BLK)

TECH TIP!

WHAT MAKES A V2 DRIVE? V2 Drums, V2 Chains, V2 Idler Cable and V2 (Threaded) masts / sprockets (USED IN 2009 production and newer)



72020034 PEDAL PAD KIT

- 81222001 PEDAL/CRANK ASSY. (R)
- 81221001 PEDAL/CRANK ASSY. (L)
- 81222011 PEDAL ONLY (R)
- 81221011 PEDAL ONLY (L)
- 81226001 PEDAL STRAP (R)
- 81227001 PEDAL STRAP (L)
- 81222101 CAP - PEDAL
- 8050111 NUT
- 8080541 WASHER

- 81050001 OUTHAUL BLOCK
- 8020041 CLEVIS PIN
- 10860001 LOCK RING

- 81055001 SPROCKET GUARD FWD
- 8031451 SCREW



- 81129001 SPROCKET V2 THREADED (W/ FWD GUARD)
- 81127001 SPROCKET GT THREADED (W/ FWD GUARD)




- 81163001 MAST V2 THREADED
- 81198101 MAST / ST TURBO V2 THREADED
- 8000341 LOC-TITE .5ML

UPDATE KIT - V2 SPROCKET
(2 V2 SPROCKETS AND 2 V2 MASTS)
81129022 V2 STANDARD MAST KIT
81129122 V2 TURBO MAST KIT

UPDATE KIT - GT SPROCKET
(2 GT SPROCKETS AND 2 V2 MASTS)
81129023 GT STANDARD MAST KIT
81129123 GTT TURBO MAST KIT



HOBIE MIRAGEDRIVE "V2" / "GT"

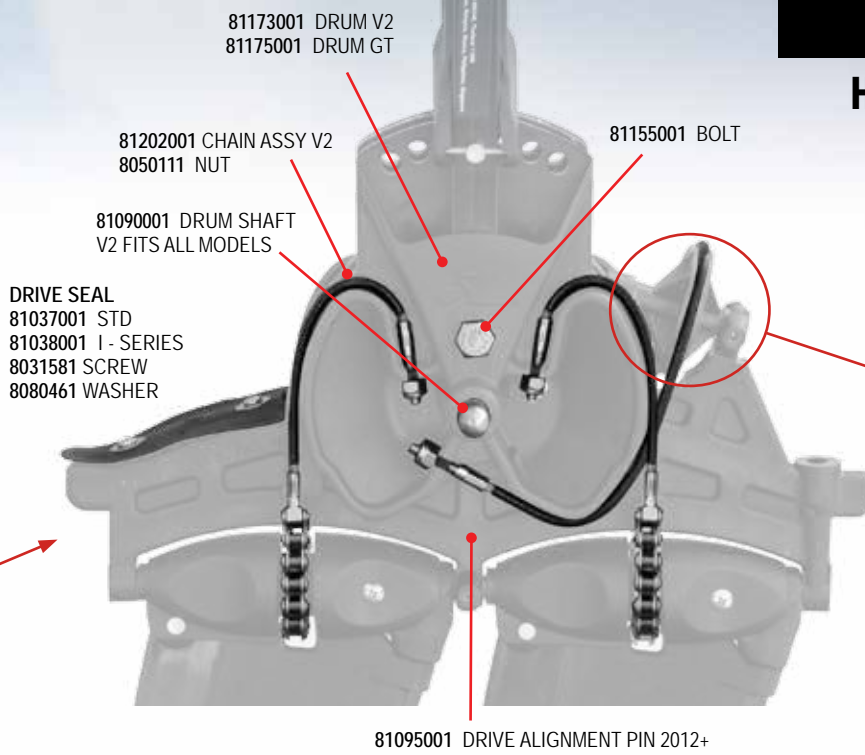

81173001 DRUM V2
81175001 DRUM GT

81202001 CHAIN ASSY V2
8050111 NUT

81155001 BOLT

81090001 DRUM SHAFT
V2 FITS ALL MODELS

DRIVE SEAL
81037001 STD
81038001 I - SERIES
8031581 SCREW
8080461 WASHER

81121001 IDLER PULLEY
81123001 IDLER PULLEY GT

81203001 IDLER CABLE V2 (18.5")

8050111 NUT

53170020 SET SCREW




81110001 PULLEY SHAFT

81095001 DRIVE ALIGNMENT PIN 2012+

HOBIE MIRAGEDRIVE "V1" (V1 PARTS LIMITED TO STOCK ON HAND)

Drive with older plastic drum, plastic spine, Sprocket / mast connection is a set-screw

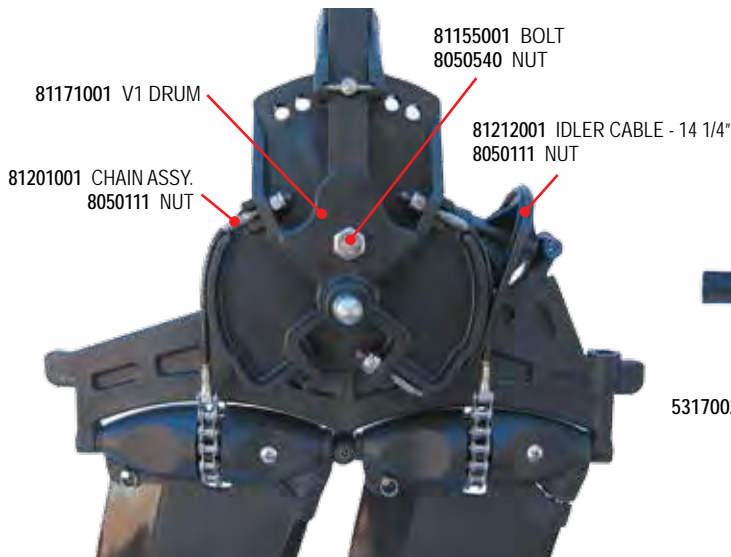

81171001 V1 DRUM

81155001 BOLT
8050540 NUT

81201001 CHAIN ASSY.
8050111 NUT

81212001 IDLER CABLE - 14 1/4"
8050111 NUT

81128001 V1 SPROCKET



53170020 SET SCREW

V1 Sprocket / mast connection uses a set-screw

81160001 OLDER / V1 MAST / STD
81198001 OLDER / V1 MAST / ST TURBO

TECH TIP!

MAINTENANCE AND TUNING - Maintenance and tuning information for MirageDrives is available on the Hobie Cat website support area. <http://www.hobiecat.com/support/history/>

Direct link to the support pages for kayaks is here: <http://www.hobiecat.com/support/products/kayaks/>

UPDATE KIT - V2 SPROCKET
(2 V2 SPROCKETS AND 2 V2 MASTS)
81129022 V2 STANDARD MAST KIT
81129122 V2 TURBO MAST KIT

MIRAGEDRIVE SPARE PARTS KITS

Spare parts kits include a fin, mast, sprocket, chain and appropriate parts for the drive version. Older drives have sprockets and masts that use a set screw connection. V2 drives use threaded sprockets and masts. All in a handy zippered pouch. Don't waste a day on the water when your MirageDrive could be easily repaired. Available for the standard fin drive or a drive with the ST Turbo fins. Standard kit shown.



MIRAGEDRIVE V2 (THREADED MAST)

80010301 KIT V2 COMFORT FIN
80013301 KIT V2 TURBO FIN

MIRAGEDRIVE GT (THREADED MAST)

80010401 GT ST (Bearing Sprocket)
80013401 GT TURBO (Bearing Sprocket)

HOBIE MIRAGEDRIVE— OLDER—

Original drive with aluminum spine, stainless sprocket / mast connection is cotter key. Limited parts available.

81130001 SPROCKET (STAINLESS)
81340001 SPROCKET BUSHING (SS SPKT)
8060111 COTTER KEY (MAST / SS SPKT)
8020061 CLEVIS PIN
10860001 LOCK RING
81211001 IDLER CABLE 14 3/4" (SOLID PULLEY)
81150001 DRUM BUSHING (ALUM DRUM)
81105001 CRANK ARM RIGHT, THREADED